


BLAU-02427

● **BLAUPUNKT**





III TV

IS 63 – 49 VT

IS 70 – 49 VT

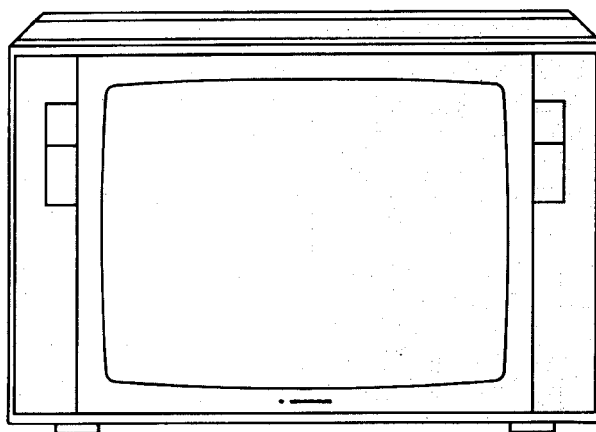

Operating Instructions

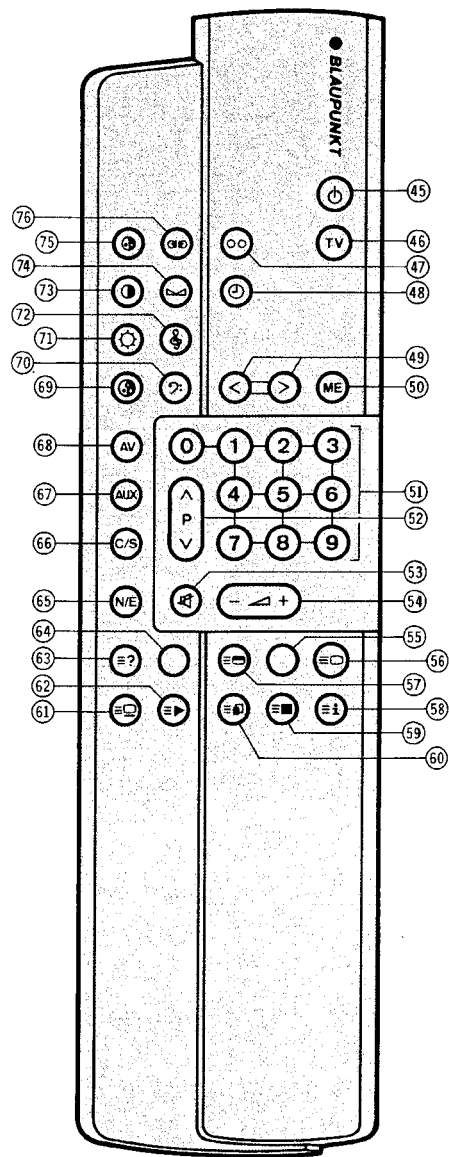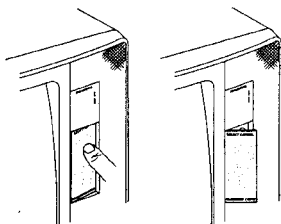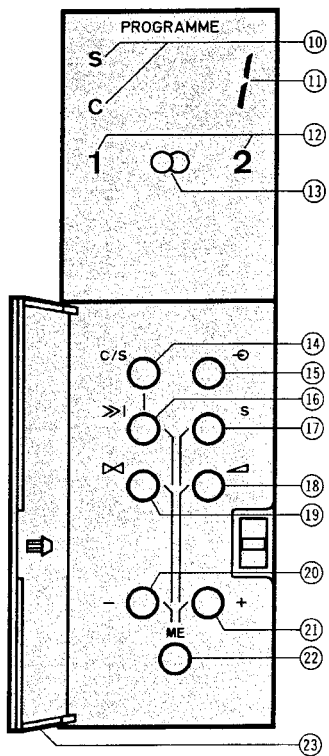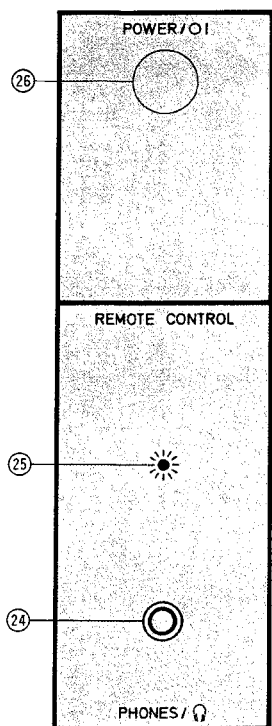

English

Contents

Control elements and indicators	24
Connector	26
Insert contrast filter panel	28
Setting up and connecting	29

TV operation

Operating the major functions via remote control	30
Operating the major functions on the set	33
Headphones connector	33
Storing TV stations	34
Fine tuning of the stations	35
Operation via the audio and video jacks	36
Videorecorder operation via antenna jack	37

Videotext mode

Important note	38
Switching to videotext mode	39
Selecting the pages	39
Videotext pages with subpages	39
TV in videotext mode	40
Revealing answers	40
Double letter size	40
Information display on the screen	40

Technical Data

Power consumption: 110 Wh

Receiving areas: VHF I, channels 2–4 and S1
VHF III, channels 5–12
and S2–S20
UHF, channels 21–69

TV standards: B/G standard
(European standard),
color standard PAL
B/G standard
(European standard),
color standard Secam

Audio output stages: 2 x 20 W (music power)

Loudspeaker

impedance: 4 Ω

Headphones

impedance: 4 . . . 600 Ω

Control elements and indicators on the unit


- ⑩ **Indicators C, S**
C = for channel
S = for special channel
- ⑪ **Indicator**
Program site, channel
- ⑫ **Indicators 1 or 2**
Two-channel sound
- ⑬ **Indicator** 
Stereo sound
- ⑭ **Button C/S**
Switches from program site indication to channel indication and vice versa
- ⑮ **Button** 
Switches program sites to AV reproduction
- ⑯ **Button** 
Starts station search tuning
- ⑰ **Preset button S**
No function, assigned for future functions
- ⑱ **Preset button** 
Volume, use buttons + ⑳ or - ㉑ to change the volume
- ㉒ **Preset button** 
Fine tuning, use buttons + ㉒ or - ㉓ to change the fine tuning
- ㉓ **Button -**
Changes preset functions
- ㉔ **Button +**
Changes preset functions
- ㉕ **ME button**
Memory button, for storing channel tuning, fine tuning and standard values of picture and sound
- ㉖ **Cover flap**
Press to open
- ㉗ **Jack PHONES/** 
Jack plug (6.3 ϕ) for headphones (4–600 Ω)
- ㉘ **Indicator**
Lights up as long as the mains switch ㉙ is kept depressed.
- ㉙ **POWER/** 
Mains switch

Control elements of the remote control

- ④⑤ **Button** 
Switching on, the unit remains in stand-by mode
- ④⑥ **Button TV**
Switches the unit from videotext mode to TV mode
- ④⑦ **Button** 
During emission with two-channel sound it switches from sound channel 1 to sound channel 2 and vice versa
- ④⑧ **Button** 
Fades the time in and out
- ④⑨ **Button** 
Changes the preset functions
- ⑤① **Button ME**
Memory button
- ⑤② **Buttons 0 ... 9**
For selecting program sites, for switching the unit on from stand-by mode, for direct channel entry, for selecting the page numbers in videotext mode
- ⑤③ **Button** 
Switching to other program sites, forwards and backwards
- ⑤④ **Button** 
For switching the sound off and on
- ⑤⑤ **Button** 
Volume
- ⑤⑥ **No function**
- ⑤⑦ **Button** 
For switching the unit from TV mode to videotext mode
- ⑤⑧ **Button** 
Larger letter size
- ⑤⑨ **Button** 
For selecting the index, page 100
- ⑤⑩ **Button** 
STOP The contents of this page will no longer be updated, subpages are no longer selected. By pressing this button again "STOP" can be deactivated.

- ⑥0 **Button**  Subpages can be selected precisely.
- ⑥1 **Button**  The TV picture appears although the set is still in videotext mode. Videotext reappears when the button is pressed again.
- ⑥2 **Button**  Selects the next following page number (page + 1)
- ⑥3 **Button**  For revealing quiz answers.
The answer disappears when the button is pressed again
- ⑥4 **No function**
- ⑥5 **Button** N/E
For activating the stored individual standard values for sound and picture and for storing TV stations.
- ⑥6 **Button** C/S
For switching indicator ⑩.
- ⑥7 **Button** AUX
Preset button for controlling the volume of the headphones.
Changes can be effected by means of <=> ④9.
- ⑥8 **Button** AV
Preset button, for switching to the program sites A1 or A2
- ⑥9 **Button**  – color intensity
- ⑦0 **Button**  – bass
- ⑦1 **Button**  – brightness
- ⑦2 **Button**  – treble
- ⑦3 **Button**  – contrast
- ⑦4 **Button**  – balance
- ⑦5 **Button**  – TINT (no function)
- Buttons ⑥9 ... ⑦5 are preset buttons. They are used to determine which function is to be changed.
Button <=> ④9 is used to effect the changes.
- ⑦6 **Button**  Base extension for stereo emissions
Stereophonic sound for mono emissions

Connectors

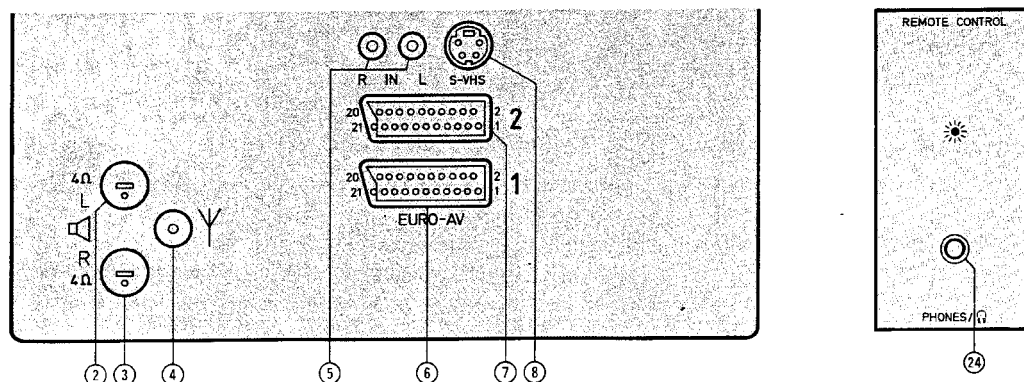

- ② **Jack** **L** – Connector for speaker or speaker box, left channel (impedance 4 Ω)
- ③ **Jack** **R** – Connector for speaker or speaker box, right channel (impedance 4 Ω)
- ④ **Antenna jack**
- ⑤ **Jacks IN R/L (Cinch)** – Inputs for audio signals
R – right channel
L – left channel
- ⑥ **Euro-AV jack 1** – Inputs/outputs for audio and video signals. Inputs for RGB signals.

If speakers or speaker boxes are connected to jacks ② and ③, the TV speakers are switched off.

Terminals:

- | | |
|--|--|
| 1 = output audio signal, right channel | 12 = free |
| 2 = input audio signal, right channel | 13 = ground red |
| 3 = output audio signal, left channel | 14 = free |
| 4 = ground | 15 = input red |
| 5 = ground blue | 16 = input blanking |
| 6 = input audio signal, left channel | 17 = ground video |
| 7 = input blue | 18 = ground blanking |
| 8 = input for switching voltage
(12 V during reproduction, otherwise 0 V) | 19 = output video signal |
| 9 = ground green | 20 = input video signal,
input sync. signal in RGB mode |
| 10 = free | 21 = plug ground |
| 11 = input green | |

- ⑦ **Euro-AV jack 2** – Inputs/outputs for audio and video signals.

Terminals:


1 = output audio signal, right channel	11 = n.c.
2 = input audio signal, right channel	12 = n.c.
3 = output audio signal, left channel	13 = n.c.
4 = ground	14 = n.c.
5 = n.c.	15 = n.c.
6 = input audio signal, left channel	16 = n.c.
7 = n.c.	17 = ground, video
8 = n.c.	18 = n.c.
9 = n.c.	19 = output, video signal
10 = n.c.	20 = input, video signal
	21 = ground, plug

- ⑧ **S-VHS jack** – For connection to a video recorder or a camcorder fitted with S-VHS output


- ②④ **Jack**  – Connector for headphones (impedance 4 ... 600 Ω)

Insert contrast filter panel


1.

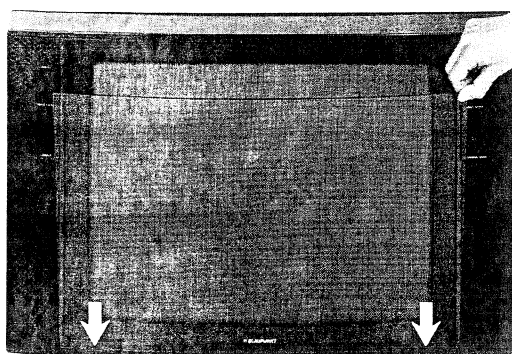


2.

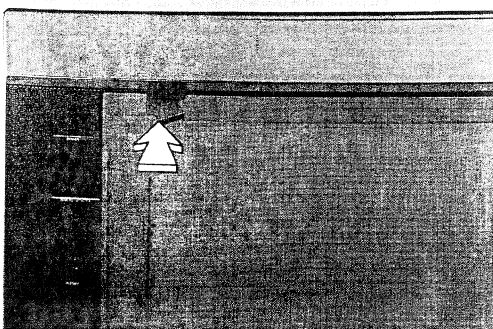

3.

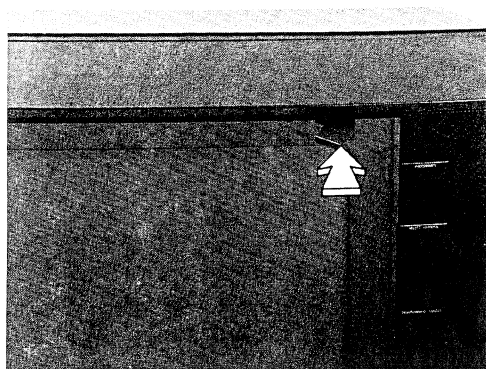

4.

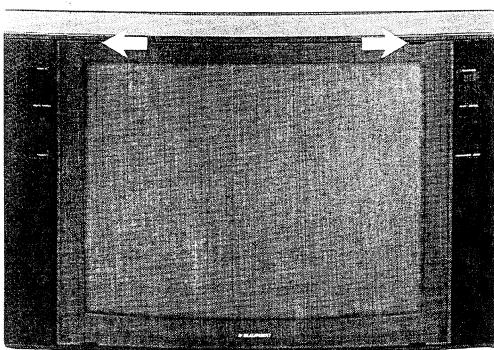

To clean the cabinet, please use a moist cloth only.

Do not use any aggressive cleaners.

Please use a moist chamois cloth for the screen as well as for sets with contrast filter panel.

Setting up and connecting

When **setting up** your set, please make sure that no bright light or sunshine can fall on the screen, as this may cause the colors to become pale and the picture to lose its brilliancy.



Please make sure that **air circulation for cooling** the set will not be impeded. Do not place the set next to a radiator and ascertain that the air vents on the rear are not covered.

When deciding where to place the TV set, please keep in mind that the **viewing distance** is important for a good picture perception and eye comfort. The ideal viewing distance depends on the size of the screen measured between two opposing corners (diagonal); see illustration. Multiply the screen diagonal by five to find out the ideal viewing distance.

The set is **connected** to the **home antenna** via the antenna jack on the rear. The antenna cable must be equipped with a DIN plug (DIN 45325).

If you wish to **connect a video recorder**, fitted with a receiver part, the home antenna must be connected to the antenna input of the video recorder and the TV set must be connected to the antenna output of the video recorder.

Connect the set to a **220 V socket**.
Deviations of $\pm 10\%$ are permissible.

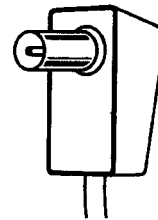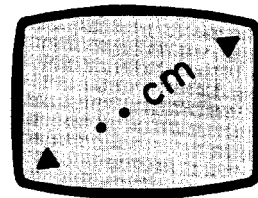


Inserting the battery

In case the transmission range of the remote control decreases, probably the battery has to be replaced.



Protect the Environment!
Do not discard used batteries with your household rubbish!

Please return them to your distributor, or bring them to a collecting point for special substances.

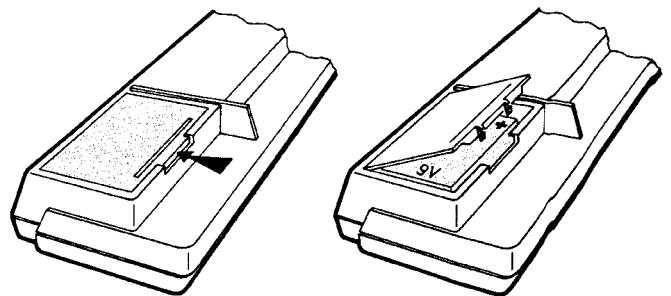

Operating the major functions via remote control

For **switching the TV set on**, press button **⏻** ②⑥. In the display ①① appears. This means program site 1 and the channel which is stored on program site 1 appears.

For this stations have to be stored in the TV set. If no stations have been stored yet, please refer to "Storing TV stations". See two pages ahead.

Normally button **⏻** ②⑥ **remains pressed in**, enabling you to **switch the TV set on and off** via the **remote control**.

For switching off press button **⏻** ④⑤, switch the set on by pressing one of the digital buttons ⑤①.

Please remember that the set will switch off automatically 10 minutes after broadcasting has ended.

If you do not intend to use your TV set for a longer period of time (e.g. on vacation), turn the unit off by pressing button **⏻** ②⑥.

The unit is equipped with **49 program sites**.

You **select a TV station** by entering, via the digital buttons ⑤①, the number of the program site on which the station is stored.

For all program sites **1–9** press the corresponding digital buttons **1–9**.


You can get access to the program sites **10–49**, by entering, via the digital buttons ⑤①, first the decimal digit of the program site and within the next 3 seconds the units digit.


In case the program places **10–49** cannot be switched on proceed as follows:

Switch the unit off (power switch **⏻** ②⑥).

Press and hold button **ME** ②② and switch the TV on again.

By means of button **P** ⑤② you can scan one program site after the other, forwards and backwards.

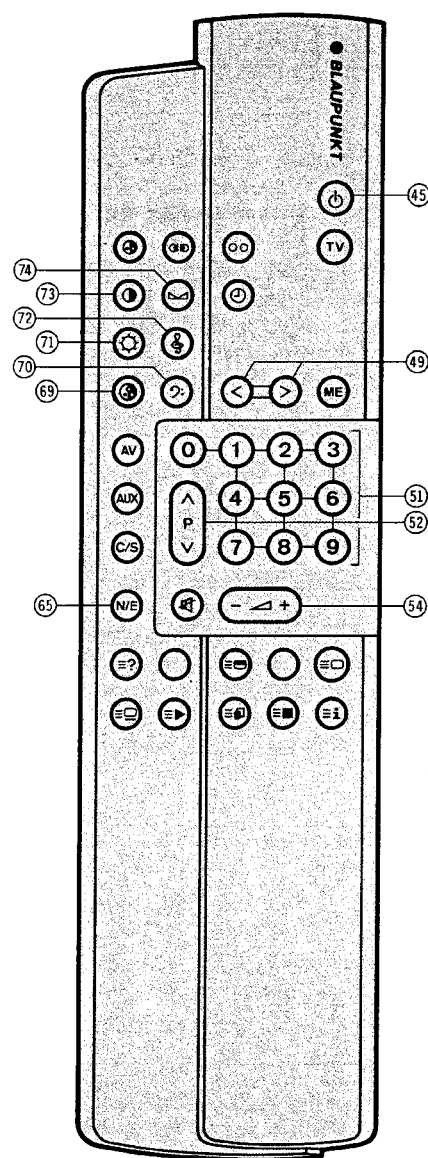

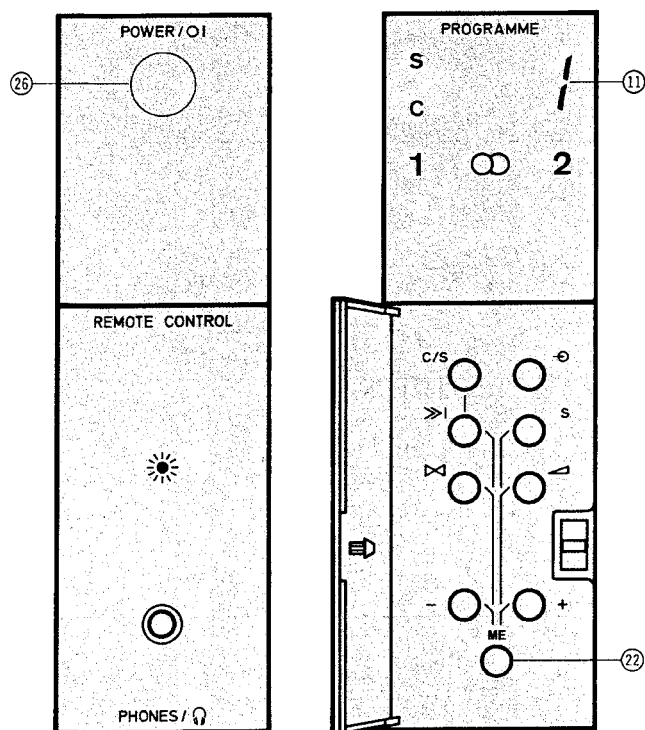

Control the **volume** by using button $\triangleleft$ (54) - or +.

Control the **contrast** by first pressing preset button $\bullet$ (73) and immediately afterwards button $\leq \Rightarrow$ (49).
 $\leq$ = less, $\Rightarrow$ = more.

Control the **brightness** by first pressing preset button $\odot$ (71), and immediately afterwards button $\leq \Rightarrow$ (49).
 $\leq$ = less, $\Rightarrow$ = more.

Control the **color intensity** by first pressing the preset button $\oplus$ (69) and immediately afterwards button $\leq \Rightarrow$ (49).
 $\leq$ = less, $\Rightarrow$ = more.

Control the **balance** by first pressing the preset button $\triangle$ (74) and immediately afterwards button $\leq \Rightarrow$ (49).

Control **treble** by first pressing preset button $\&$ (72) and immediately afterwards button $\leq \Rightarrow$ (49).
 $\leq$ = less, $\Rightarrow$ = more.

Control **bass** by first pressing preset button $\supset$: (70) and immediately afterwards button $\leq \Rightarrow$ (49).
 $\leq$ = less, $\Rightarrow$ = more.

For all these adjustments **standard values** are stored **ex factory**. Picture and sound are reproduced with these standard values

- after switching on or
- when button **N/E** (65) is pressed.

You can change these **standard values** by modifying them according to your personal wishes. Then press button **ME** (22) in order to store these new values.

You can **switch the sound off**, for example if you wish to make a phone call, by pressing button 53. When the button is pressed again the sound will return.

Thanks to the videotext decoder you can **fade-in the time** on the screen. For this the station which the set is receiving at the given moment must emit videotext.

Press button 48 and the time will be displayed in the right-hand corner of the screen.

The time appears when the button is pressed again. It also disappears automatically when you switch to another program.

This set is equipped to receive programs broadcast in **stereo sound** and in **two-channel sound**.


In two-channel sound two completely different kinds of information can be broadcast, e.g. a second language during a movie.


When you receive a program that is broadcast in stereo sound, both indicators 13 will light up.

When you are tuned to a program which is broadcast in two-channel sound, the 1 in the display 12 will light up. This means that you listen to the sound which is broadcast on channel 1.

Press button 47 if you wish to listen to the sound on channel 2. The 2 will light up in the display 12.

By pressing button 47 once again you can switch back to channel 1.

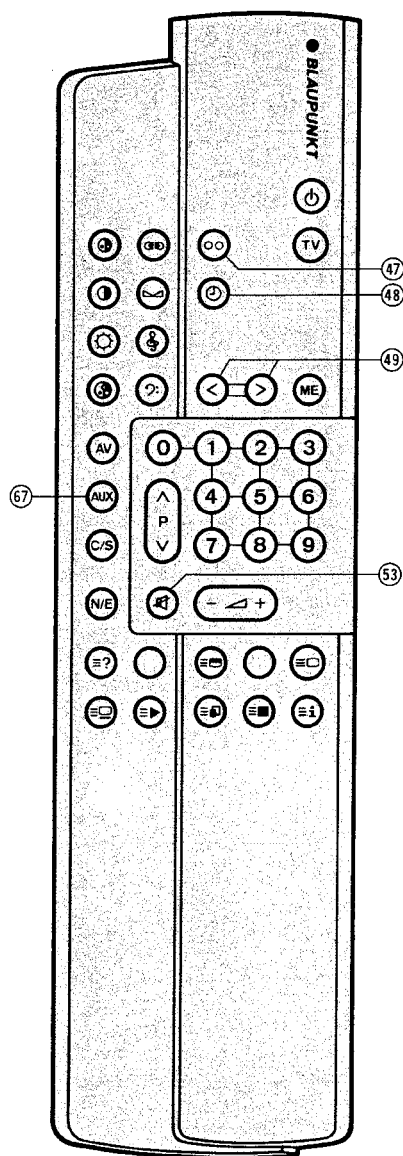

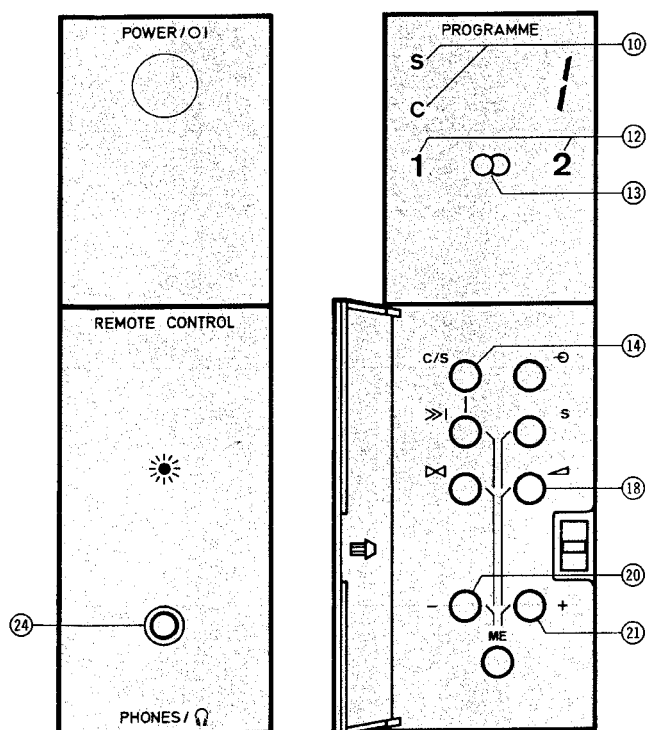

Operating the major functions on the set

You can **select a program site** by first using button **C/S** ⑭ to switch the indicators ⑩ **C** or **S** off and then using buttons + ⑳ or - ㉑ to switch to the program site.

Control the **volume** by first pressing button  ⑮ and immediately afterwards button - ⑳ or button + ㉑.

Headphones connector

Headphones can be connected to jack  ②④ (impedance 4 – 600 Ω).

They must be fitted with a stereo jack plug, 6.3 mm Ø.

You can control the volume of the headphones by pressing button **AUX** ⑥⑦. Then use button <=> ④⑨ to change the volume.

The speakers can be switched off.

Press button  ⑤③. By pressing this button again the speakers can be switched on again.

Storing TV stations

TV stations may be **stored** in **two ways**.

- using search tuning, if you do not know the channels
- using direct channel input, if you know the channels

Storing by means of search tuning (via remote control)

Use button **C/S** (66) to switch indicator **C/S** (10) off.

Use buttons $\hat{P}$ or $\hat{P}$ (52) to choose the program site to which the TV station is to be allocated.

Use button **C/S** (66) to switch to indicator **C** (10).

Use buttons $\hat{P}$ or P (52) to start the station search tuning.

The station search scans automatically all channels for stations. The channels appear in the display (11).

The station search stops each time a station has been found. Press buttons **F** or **P** (52) again in order to continue the station search tuning until the desired station will appear on the screen.

If you wish to store the station press button **ME** (50) and then button **N/E** (65).

In this way you can store TV stations on all program sites.

Please refer to "Fine tuning" on the next page.

Storing by means of direct channel input (via remote control)

Use button **C/S** (66) to switch indicator **C/S** (10) off.

Use buttons $\hat{P}$ or $\hat{E}$ (52) to choose the program site to which a TV station is to be allocated.

Use button **C/S** (66) to switch to indicators **C** or **S** (10).

C for standard channels (2-4, 5-12, 21-69)

S for special channels, i.e. channels of cable networks (S1–S20).


Now enter the channel by means of the digital buttons (51).


A channel must always be entered with two digits.

For example: For channel 8 enter 0 and 8. The display indicates 08.

If you wish to store the station, press button **ME** (50) and button **N/E** (65).

In this way you can store TV stations on all program sites. Please refer to "Fine tuning" on the next page.

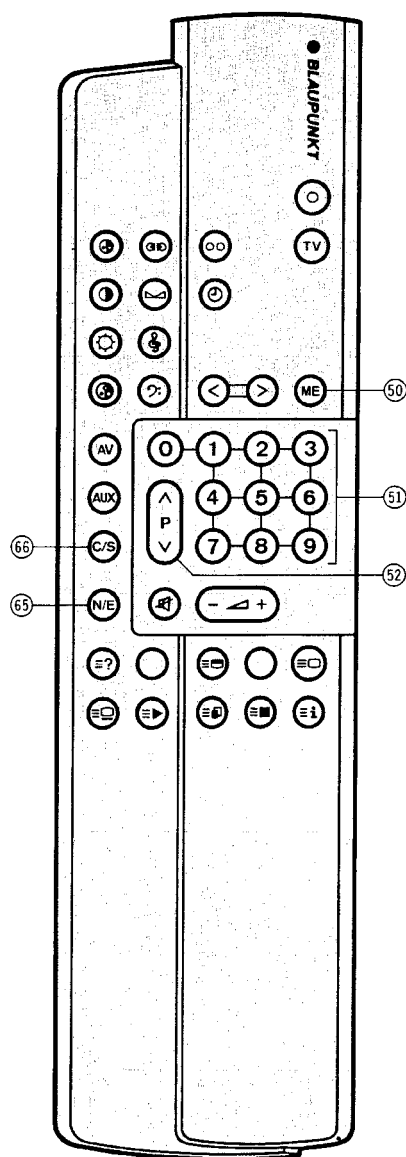

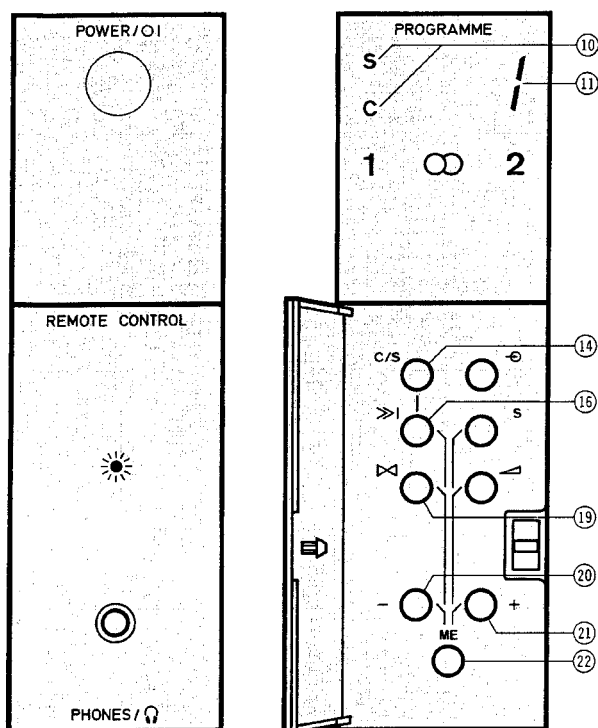

Storing by means of station search tuning (on the set)

Use button **C/S** ⑭ to switch indicator **C/S** ⑩ off.

Use buttons - ⑳ or + ㉑ to select the program site on which the TV station is to be stored.

Use button **C/S** ⑭ to switch to indicator **C** ⑩.

Use button **>>I** ⑮ to switch the station search tuning on, then use buttons + ㉑ or - ⑳ to start station search tuning.

The station search automatically scans all channels for stations. The channels appear in the display ⑪.

The station search stops each time a station has been found. Press buttons + ㉑ or - ⑳ to continue the search tuning until the desired station will appear on the screen.

If you wish to store the station press button **ME** ㉒.

In this way you can allocate TV stations to all program sites.

Storing using direct channel input (on the set)

Use button **C/S** ⑭ to switch indicator **C/S** ⑩ off.

Use buttons - ⑳ or + ㉑ to choose the program site to which a TV station is to be allocated.

Use button **C/S** ⑭ to switch to indicators **C** or **S** ⑩.

C for standard channels (2-4, 5-12, 21-69).

S for special channels, i.e. channels of cable networks (S1-S20).

Use buttons - ⑳ or + ㉑ to choose the channel and then press button **ME** ㉒ to store it.

In the same way TV stations can be allocated to all program sites.

Fine tuning of the stations

Normally the TV stations are adjusted by means of an **automatic tuning facility**.

If **reception is poor**, you may **readjust the adjustment** in order to improve the picture.

Press button **⏏** ⑲ momentarily, and then the + button ㉑ for a few seconds. If the picture is not improved, press the - button ⑳ until you receive the best picture.

After having obtained the optimum adjustment press the **ME** button ㉒ **within the next 5 seconds**.

The adjusted fine tuning is now stored.

Operation via the audio and video jacks

Video sets such as video recorder, camera recorder, CD Video, etc. can be connected to the audio and video jacks.

If your video set is equipped with an Euro-AV jack connect it to the Euro-AV jack of the TV set.

If your video set features an S-VHS jack, connect it to the S-VHS jack of the TV. For audio playback please use jacks IN L and R.

Your specialized dealer will inform you how to connect video sets with other jacks.

To every video jack belongs one program site. When feeding a signal into one of the jacks, the corresponding program site must be switched on.

This is program site A1 for the Euro-AV jack 1 and program site A2 for the Euro-AV jack 2 and for the S-VHS jack.

Euro-AV jack 1

Choose program site A1 to activate playback via the Euro-AV jack 1 on the set. Press button **AV** (68) and then the digital button **1** (51).

Euro-AV jack 2


Choose program site A2 to activate playback via the Euro-AV jack 2 on the set. Press button **AV** (68) and then the digital button **2** (51).


S-VHS jack

Choose program site A2 to activate playback via the S-VHS jack on the set. Press button **AV** (68) and the digital button **2** (51).

For audio playback connect the video recorder to the jacks IN L and R of the TV set.

The program fed into the S-VHS jack and into jacks L and R can be taken off the Euro-AV jack and recorded.

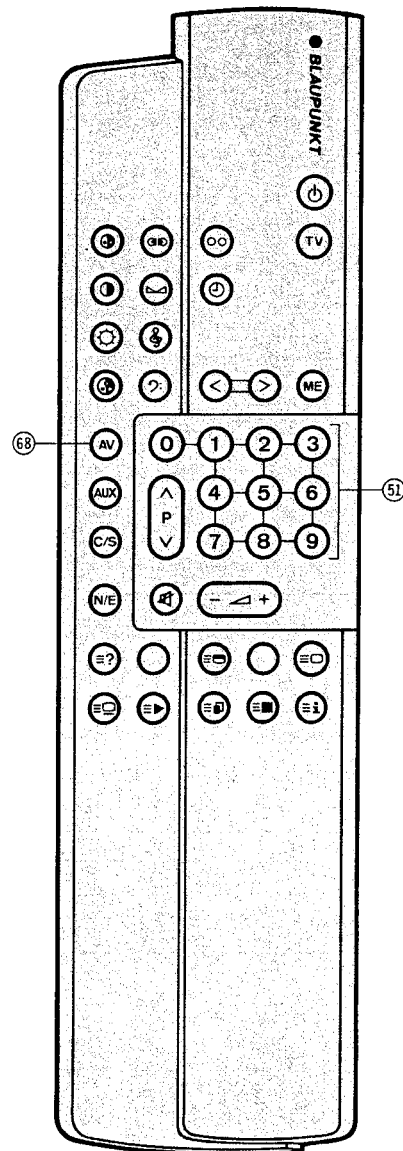

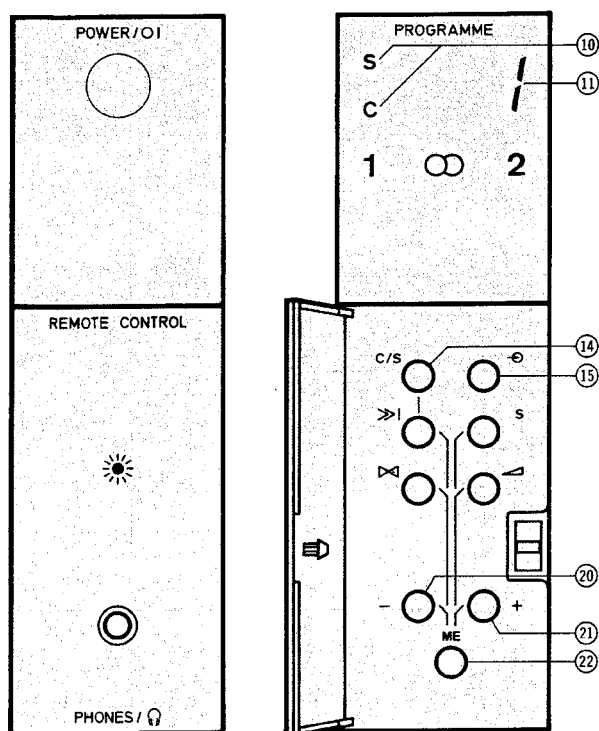

Decoding of coded programs

Stations transmitting coded programs from time to time can be fed into cable TV systems. These stations are subject to charges. They can be decoded by means of an automatic decoder. The decoder must be connected to the Euro-AV jack of the TV. As soon as the decoder receives a coded program it is activated and thus activates the TV.

For this the TV must be prepared:

Activate the program site on which the station transmitting the coded program is stored.

Press button **⊖** ⑮.

On the display ⑪ a dot lights up next to the number of the program site.

Now press button **ME** ②②.

If several stations transmit coded programs proceed like this for all program sites.

Video recorder operation via antenna jack

In order to operate a video recorder via the antenna jack, the TV set must be switched to the channel used by the video recorder.

Most **video recorders** emit on **channel 36**. This is indicated in the operating instructions of your video recorder.

Now you can adjust any program site you wish to the channel of the video recorder.

Use button **C/S** ⑭ to switch indicator **C/S** ⑩ off.

Use buttons **-** ⑳ or **+** ㉑ to choose the program site.

Use button **C/S** ⑭ to switch indicator **C/S** ⑩ to C.

Use buttons **-** ⑳ or **+** ㉑ to choose channel 36.

Press the **ME** button ②②.

Now the video channel is stored on this program site.

When playing back a video tape, you should always switch to this program site.

Videotext mode

Important note

Before proceeding with the operating instructions, we want to give you some information about videotext.

Videotext is an additional information that is broadcast by the TV stations along with your TV program.

The built-in videotext decoder of your set enables you to display this additional information on the screen.

Videotext is transmitted in the form of texts or graphic representations, or as subtitles to the TV program. The subtitles are intended to help people with a hearing handicap.

Videotext is transmitted page by page. The pages are numbered and may be selected by remote control.

In addition, this videotext decoder offers you the following features:


- It controls the time indication on the screen
- It controls the program indication on the screen.

An inferior antenna is likely to result in poor videotext transmission, even though the television set is in perfect working order.

Quality risks to be inferior particularly if the picture is unstable or if there are ghost images.

In such a case you should try to improve quality by means of fine tuning.

If no improvement is possible, you should have your antenna system checked.

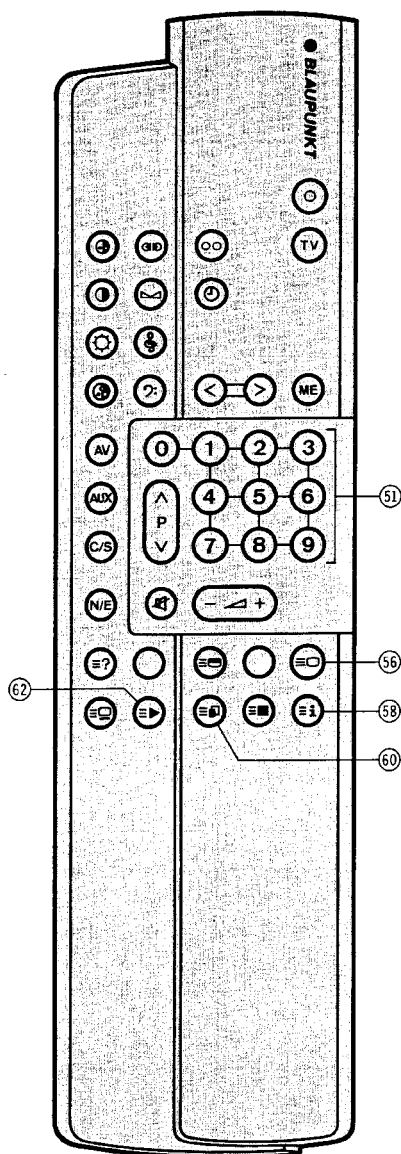

Switching to videotext mode

Press button 56.

If you want to see page 100 with the index, press button 58.

Selecting the pages

Enter a page number by pressing the corresponding digital buttons 51.

This videotext decoder is capable of receiving all videotext pages up to 899.

The page number you selected is displayed in the upper left corner of the screen. One line below, to the right, you can see continuous numbers, indicating that the set is "searching" for the page in question.

The page is displayed on the screen as soon as it has been found.

The next following page number, higher by one, can be selected by means of button 62.

Any other following page number, which is higher by more than one, can be selected by means of the digital buttons 51.

Videotext pages with subpages

If a message cannot be displayed on one page only, the remaining text is shown on subpages.

These subpages appear automatically one after the other. The symbol >> appears in the lower right corner, and in the upper right corner you can see numbers like 01/04, 02/04, etc.

01/04, for example, means that you are looking at the first of four subpages.

If you wish to select precisely one subpage, press button 60.

-0000 appears on the screen.

Now you can enter the number of the subpage, using the digital buttons 51.

The subpage will appear as soon as it is transmitted by the station.

Use button 62 to switch to the following subpage.

In order to select pages without subpages, press button 60 once again.

TV in videotext mode

In **videotext mode** you can switch to the **TV picture** by pressing button $\equiv \square$ (61).

You can switch back to the videotext page by pressing button $\equiv \square$ (61) again.

This is useful if you have selected a page which is constantly updated by the station, such as sports emissions. You can watch TV and whenever there is a new information, a notice will indicate this on the screen.

Then you must press button $\equiv \square$ (61) to see the updated videotext page.

It is also useful if, after selection of any page you want to bridge the waiting time.

As soon as the page is found a notice will indicate this on the screen.

While waiting for a certain page to be selected you should also switch back to the TV picture. As soon as the page has been found "ABRUFBEREIT" (page can be recalled) is displayed on the screen.

Revealing answers

Quiz answers are **not** displayed when you select a quiz page unless you press button $\equiv ?$ (63).

The answers disappear when you press button $\equiv ?$ (63) again.

Double letter size

If you wish to **double the size of letters**, press button $\equiv \blacksquare$ (57).

You will first see the **upper** half of the page; when you press this button again, the **lower** half is displayed.

Letters are reduced to their **normal** size when you press button $\equiv \blacksquare$ (57) again.

In case of videotext tables with subtitles, the letters' size is also doubled when you press button $\equiv \blacksquare$ (57).


Information displayed on the screen


Time

The videotext decoder makes it possible to have the **time displayed** on the screen, provided that the station received broadcasts videotext.

Press button $\odot$ (48) – the time appears in the upper right corner of the screen. The time disappears when you press the button again.

It also disappears automatically when you switch to a different program.

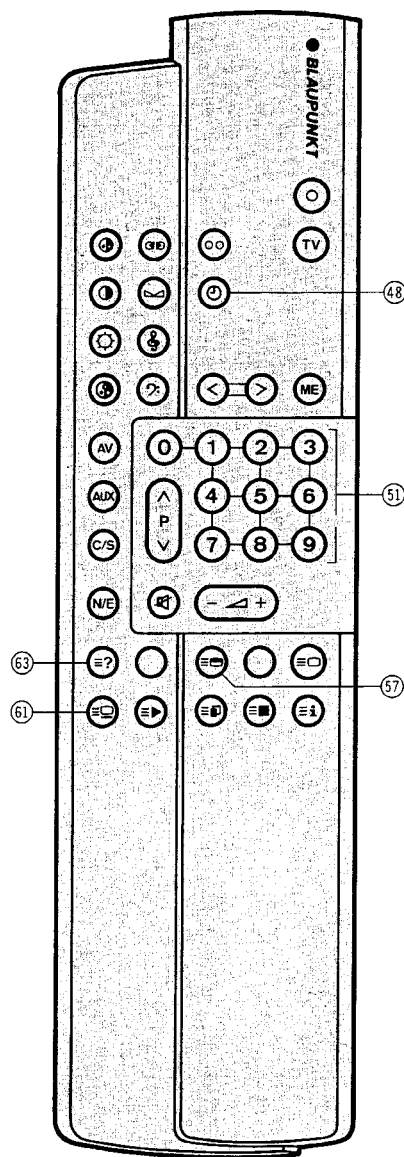

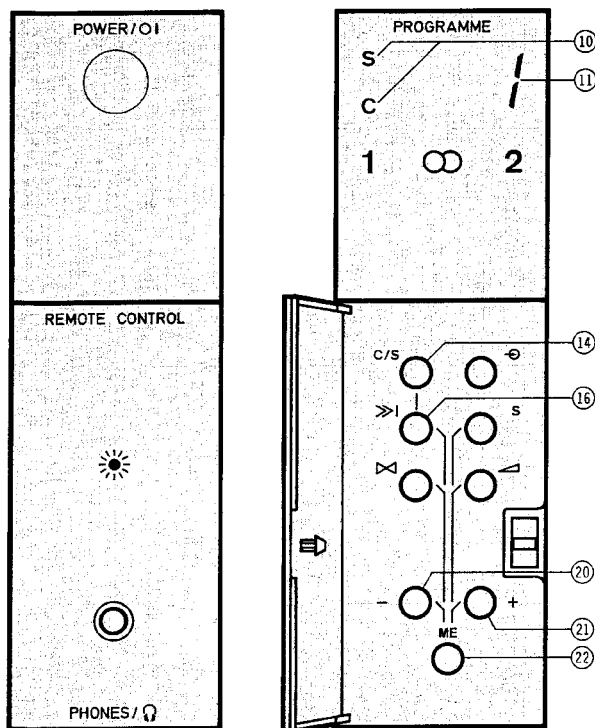

Station names

Quite a lot of cable TV programs are already offered, and their number is constantly increasing.

It would certainly make things easier if, after you switched to a different program, the **name of the new station** was displayed on the screen.

This is just what the videotext decoder does.

Before this is possible, however, the logos of the station names have to be "entered" once.

The station names are entered in **TV mode**.

The program site must be displayed ⑪ instead of the channel.

If indicators **C** or **S** ⑩ light up, this means channel.

If this is the case, press button **C/S** ⑭ in order to switch the indicator off.

When you now press button >>I ⑮ a black square appears in the upper right corner of the screen. There are four places available; above the first you see a question mark.

Press button + ⑰. A capital A appears.

If you press this button several times, the letters of the alphabet and the digits 0-9 advance.

If you press button - ⑱, the letters and digits run backwards.

Once you have found the correct letter or digit, move the question mark to the second place by pressing button >>I ⑮. Press one of the buttons again until the correct character of this place is displayed.

Move the question mark to the next place by pressing button >>I ⑮, and so on.

A "free space" is available between 9 and A. You can use this to enter a space in the station name, if required.

Having entered the whole station name, press button **ME** ⑳.

You should then switch to the next program site by pressing the corresponding digital buttons ⑤① of the remote control. Proceed as described above for the next entry, and all program sites.

If you now switch to a different program, the station name will be displayed on the screen.

Protective measures

If liquid has been poured over the set:

- Pull the plug immediately out of the wall socket.

If the cabinet or the back cover has been damaged:

- Pull the plug immediately out of the wall socket.

If a bright horizontal stripe appears instead of a color picture:

- Turn off the TV set at once.